

IP CONTROL INTERFACE

COMMANDS

| | |
|---------------|---|
| ARM | - Arms the area assigned to keypad 8 arm button. |
| STAY | - Stay arms the area assigned to keypad 8 stay button |
| OOx | - Toggles output number x |
| STATUS | - Returns current panel status |
| MEME | - Returns 16 most recent memory events |
| MEMX | - Exit memory print mode |
| PANIC | - Causes immediate panic from keypad 8 |
| CHIME | - Toggles chime mode |
| A | - Quick arms area A |
| B | - Quick arms area B |
| RL1 | - Turns relay 1 on for the set time |
| RL2 | - Turns relay 1 on for the set time |

KEYS xxx COMMANDS

It is possible to send key strings to the panel via the KEYS command to mimic keypad operation, the KEYS command will only accept valid keypad digits and the enter key.

KEYS xxx - Where xxx = the keypad string to send to the panel. Ie. KEYS 123E will send 123 ENTER.

Valid keys

| | |
|------------|--------------------|
| 0-9 | - All numeric keys |
| E | - Enter |

ZONE MESSAGES

- ZOxx** - Zone open, where xx = Zone number
- ZCxx** - Zone Closed, where xx = Zone number
- ZAxx** - Zone Alarm, where xx = Zone number
- ZRxx** - Zone Alarm restore, where xx = Zone number
- ZBYxx** - Zone Bypass, where xx = Zone number
- ZBYRxx** - Zone Bypass restore, where xx = Zone number
- ZTAxx** - Zone Tamper, where xx = Zone number
- ZTRxx** - Zone Tamper restore, where xx = Zone number

AREA MESSAGES

- AA** - Area A armed
- AB** - Area B armed
- SA** - Area A stay armed
- SB** - Area B stay armed
- DA** - Area A disarmed
- DB** - Area B disarmed
- EAA** - Area A in exit delay
- EAB** - Area B in exit delay
- ESA** - Area A in stay mode exit delay
- ESB** - Area B in stay mode exit delay

OUTPUT MESSAGES

- OOx** - Output on, where x = Output number
- OCx** - Output Off(closed), where x = Output number

SYSTEM MESSAGES

| | |
|------------|-----------------------------------|
| MF | - Mains Fail |
| MR | - Mains Restore |
| BF | - Battery Fail |
| BR | - Battery Restore |
| TA | - Tamper Alarm |
| TR | - Tamper Restore |
| LF | - Line Fail |
| LR | - Line Restore |
| DF | - Dialler Fail |
| DR | - Dialler Restore |
| RO | - Ready On (all zones are sealed) |
| NR | - Not Ready (Zones are unsealed) |
| FF | - Fuse Fail or Output Fail |
| FR | - Fuse Restore or Output Restore |
| ZBF | - Zone Battery Fail |
| ZBR | - Zone Battery Restore |
| PBF | - Pendant Battery Fail |
| PBR | - Pendant Battery Restore |
| CTF | - Code Tamper Fail |
| CTR | - Code Tamper Restore |

OUTPUT MESSAGES

| | |
|------------|---|
| OOx | - Output on, where x = Output number |
| OCx | - Output Off(closed), where x = Output number |